

Shot Navi®

VELLIX v12 VELLIX v14

User Manual

Introduction

Thank you for purchasing Shot Navi VELLIX.

This GPS golf watch features a high-visibility AMOLED display, offering clear and vivid visuals that are easy to read from any angle. The touchscreen interface significantly improves usability during play. Buttons are consolidated on one side for a clean and stylish design. The device is also equipped with advanced features such as Dynamic Green Eye and Slope Direction, allowing users to quickly understand green contours and slope direction at a glance. We hope this product supports you in improving your score and enjoying faster and more efficient play.

Table of Contents

Before Using This Product

Introduction	P2
Table of Content	P3~5
Safety Precautions	P6
Warnings	P7~8
Before Using the Pedometer	P8
Contents List/Parts Names	P9
Charging	P10
Operating Instructions	P11
Wristwatch Mode	P11
Power On/Off P	P12

Device Settings

Main Menu	P13
Sub Menu	P14
System Settings (Main Menu)	P15~17

Golf Navigation

Start Golf Navigation	P18~20
Competition Mode/Automatic Golf Course Search/Select Two-Green	
Navigation Screen & Operating Instructions	P21~22
Operating Instructions/Navigation Screen	
Navigation Screen (View Types)	P23~24
Hazard View/Simple View/Green View	
Slope Direction Function	P24
Dynamic Green Eye Function	P25
Putt Simulation/Pin Position Registration	
Auto View Change Function	P26
Auto Measure Function (Automatic Distance Measurement)	P27~28
Manual Location Registration	P29
Two-Green Manual Switching	P30
Display Text in a Larger Size	P30
Fairway Navigation Function	P31~32
Green Direction	P33
Height difference, Horizontal and Slope-Adjusted Distance Display	P34~35
Three-Point Distance Measurement	P36

Display Options	P37
Scorecard	P38~39
Navigation & Play Information	P40
Navigation Menu	P41~42
Navigation Settings	P43
Activity	
Activity Tracker Settings	P46
Using the Pedometer	P47
Step count graph/weekly Summary	
Others	
Data Update / Using the SCO Log	P48
LogData Update/Using the SCO Log	
Utilize the App	P49~57
Smartphone App "Shot Navi 3DX"/Download the App	
/Connect This Product with "Shot Navi 3DX"/Register Club Distance	
/Data Update	
Product Specifications	P58
FAQ	P59
After-Sales Service	P60
Warranty	P61~62

Safety Precautions

To ensure safe use of this product, please follow the safety guidelines outlined below. After reading, keep this user manual safely at hand for future reference. Unauthorized reproduction of this manual is prohibited

- **Handle with Care:** Avoid dropping or impacting this product. Severe impacts may cause significant damage.
- **Operating Temperature:** The operating temperature range of this product is -10°C to 60°C . Avoid using this product in environments with sudden temperature changes, even within the range, as this is a precision instrument.
- **Avoid leaving unattended for a long time:** Do not leave this product in direct sunlight or in extremely hot or cold environments for long periods.
- **Electromagnetic Interference:** Avoid placing this product near equipment that generates strong electromagnetic fields or radiation during use or storage.
- **Long-Term Storage:** When not using this product for an extended period, store it in a cool and dry place. For long-term storage, place this product in a dry box to prevent damage. Do not store this product in following environments:
 1. In areas with poor ventilation and high humidity
 2. Inside a vehicle exposed to excessive sunlight or extreme temperatures
 3. In environments where humidity exceeds 90%
 4. Store the device with the battery charge at approximately 50%. Storing the battery in a fully charged or completely depleted state may lead to faster battery deterioration.

Warnings

Never disassemble, modify, or attempt to repair this product yourself. Doing so may cause damage to this product. Warranty is voided.

- **Avoid Extreme Conditions:** Do not use this product in extremely cold, hot, or humid conditions, as this may cause malfunction.
- **Avoid Dusty Environments:** Do not use this product in dusty areas, as this can lead to malfunction.
- **Keep Away from Fire:** Do not place this product near fire, as it may cause deformation or malfunction.
- **Water Resistance:** This product is water-resistant (to the level suitable for everyday use); however, it is not fully water-resistant and should not be used in rainy conditions. Usage in the rain is not covered under warranty. Do not leave the product in a wet condition, as this may result in fire, electric shock, or malfunction. Please exercise caution.
- **Charging Contacts Care:** The charging contacts of this device are made of stainless steel; however, rust may occur due to dirt, sweat, or other residue on the surface.
After use, please wipe the device with a clean, dry cloth.
- **Avoid direct sunlight when storing:** When storing the device, avoid direct sunlight. Storing it in environments where the temperature exceeds 40° C may significantly impair its performance. For storage longer than one month, ensure the battery is charged to approximately 50%.

Note: Storing the battery in a completely empty state may render it unusable. While the battery protection circuit prevents overcharging and discharge to 0 voltage, natural discharge over long-term storage may cause the voltage to drop to 0. To prevent this, it is recommended to store the device with approximately 50% battery charge during long-term storage. Additionally, do not store the device in a fully charged state, as this may cause battery damage. Avoid leaving the device connected to the charger for extended periods. Overcharging may cause the battery to swell, generate heat, and potentially result in fire due to chemical reactions.

Before Using the Pedometer and Calorie Tracking

About the pedometer

This device uses an accelerometer to detect wrist movement and body motion, measuring your activity level.

 
The step count and activity calories measured by this device may differ from actual values depending on individual physical conditions and usage environment.

Please use the measured values as a general guideline for daily activity.

Contents List / Parts Names



Main Unit



Watch Case



User Manual/
Warranty Card



Magnetic Charging and Data
Cable (USB)



- ① Full-Color Touchscreen Display
- ② Upper Button/Power On-Off Button: You can switch screens.
- ③ Lower Button: You can return to the previous screen.
- ④ Terminal: Connect to the charger.

Note: The function of those buttons varies depending on the display screen.

Charging

● Charging:



Align the magnetic pins of the USB cable with the terminals on the back of the device.

Note: The AC adapter is sold separately. If you are providing your own, please use one with the following specifications.

Output: DC 5V, 500~1000mA.


Note: Using an incompatible AC adapter may result in malfunction or cause accidents.



Note: The USB connection port is waterproof; however, do not charge the device while it is wet. Ensure the terminal area is completely dry before charging to prevent overheating or short circuits.

● How to Check the Charging Status:

During charging, "Charging" is displayed on the screen.

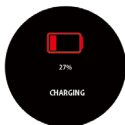

When fully charged, "Charging Complete" is displayed on the screen.



Operating Instructions

Button and Touch Operation

● Tap:



Touch the screen with your finger.

● Swipe:



Scroll the screen up, down, left, or right with your finger.

● Short Press:



Press the button briefly.

● Long Press:



Press and hold the button.

Wristwatch Mode



Main Menu



Sub Menu



○ Menu

○ Power On/Off
(Page12)

○ Back

○ Starting Golf
Navigation (Page19)

Changing the Watch Face



Long-press the watch face to change the watch face.

Power On/Off

● Power On:



Long press the power button for approximately 5 seconds until the logo appears.

● Power Off:



Long press the power button for approximately 3 seconds while on the watch screen.

● Reset:




If the GPS is not working, the screen freezes, or the device does not power on, it may be frozen.

To reset and reboot the device, long press the upper button for 10 seconds.

Main Menu

On the watch display screen, short pressing the upper button or swiping the screen to the left displays the main menu. (Short press the lower button or swipe right to return to the watch display.)

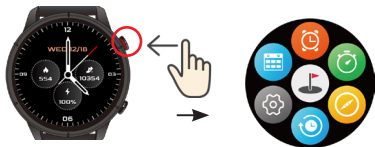

- **Golf Navi** (Page18)
Start the golf navigation.



- **Alarm**
Set the alarm.



- **Stopwatch**
Use this function to measure elapsed time, including lap times.



- **Compass**
Displays the compass.



- **Timer**
Set the timer duration.



- **SYS Setting** (Page15)
Set the time, language, etc.




- **Calendar**
Displays the calendar.

Sub Menu

Swipe down on the watch screen to display the sub-menu.

Note: Swipe up to return to the watch screen.

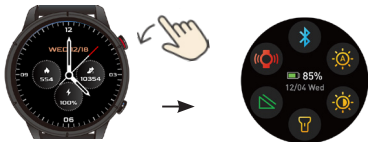

Turn Bluetooth ON/OFF.



Turn auto brightness adjustment ON/OFF.



Adjust the brightness manually.



Flashlight




Switch between horizontal distance and slope-adjusted distance.



Turn vibration ON/OFF.

System Settings (Main Menu)

Select "SYS Settings" from the main menu.

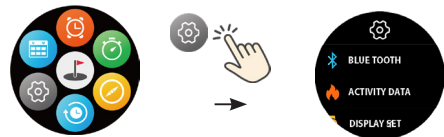

● Bluetooth

- On/OFF: Enable or disable pairing.
- Pairing: When Bluetooth is turned on, the pairing screen is displayed.



● Activity

Displays your activity information.



● Display

- Brightness: Adjust the screen brightness manually.
- Screen Timeout: Select the screen timeout from 15, 30, or 60 seconds.
- Auto Brightness: Automatically adjusts the screen brightness.



● Message Notifications

Notifies you of incoming calls and SNS notifications on your smartphone.

Note: This feature is supported on iPhone 5S and later models only.

Note: Available only when the Shot Navi app is installed and connected via Bluetooth.



● Language

Set the language.

Available languages: Japanese / Korean / English /
Chinese (Simplified / Traditional)
/ German / Italian / French



● Personal Settings

Set your profile, including height, weight, and stride length.



● Time Setting

- Time Edit: Manually set the date and time.
- Auto Timeset: Automatically set the date and time by acquiring GPS signals.
- Time Zone: Set the time difference from UTC (Coordinated Universal Time). For Japan, this is +9. It is updated automatically after "Automatic Time Setting." Manual adjustments can also be made.
- Daylight Saving: Enable or disable Daylight Saving Time.
- Time Format: Choose between a 12-hour or 24-hour format for the digital watch display. (Certain displays, such as those in golf navigation mode, may be fixed to the 24-hour format.)



● Date

- Date & Time:Set the year
- Date Format:Select the display format: Day/Month/Year, Month/Day/Year, or Year/Month/Day.



● Units (Personal Settings)

(Select the unit system: (cm/kg) or (in/lb).)



● Product Information

Displays the device firmware version and certification marks (e.g., Technical Conformity Mark).

If a new firmware version is available on our website, download it from the site and update the device.

https://shotnavi.jp/snp/vellix/sw_update.php



● Reset Setting

Restores all settings to their factory default values.

Start Golf Navigation

How to Start

On the watch display, short press the upper button, or swipe the screen to the left and select "Golf Navi" from the main menu.



Competition Mode



First, select the competition mode. If no input is made, the cursor automatically selects the highlighted option after a certain amount of time.

When starting in competition mode, some navigation functions is restricted.

Functions Restricted in Tournament Mode

- Slope Direction (Page24)
- Dynamic Green Eye (Page25)
- Fairway navigation (Page31)
- Green Direction (Page33)
- Height Difference (Page34)
- 3-Point Measurement (Page36)
- Shot Distance (Page37)
- Recommended Club (Page53)
- Weather Information (Page55)




Automatic Golf Course Search

- GPS becomes activated, and the search for the golf course begins.
- Perform this operation in an open outdoor area for better GPS reception.
- GPS signal cannot be received inside the clubhouse. Please perform this operation near the teeing ground.

Note: If multiple golf courses are found near your current location, scroll to select the appropriate golf course.

Manual Golf Course Search

If GPS reception is poor or you are indoors and unable to search for a golf course, you can manually search for a golf course. Tap "Manual" during the satellite search to switch to the manual search mode.

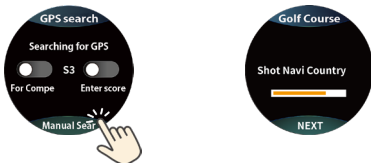

When GPS is not received, the remaining distance is not displayed.

Navigation Interruption:

- After starting the golf navigation, if the GPS signal cannot be acquired for 5 minutes, the navigation is automatically interrupted. (Page42)
- After 2 hours, the navigation automatically ends. To resume navigation, please select "Navi Return " from the main menu.

Once the golf course search is complete, the golf navigation starts, and the distance to the green is displayed.

Select Two-Green





For courses with two greens and available green type information, a menu is displayed to select the green to be used.

Navigation Screen & Operating Instructions

Operating Instructions



Navigation Screen

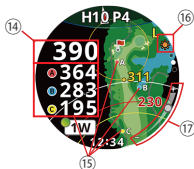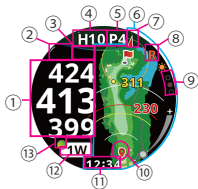


- ① Distance to the center, front edge, and back edge of the green
- ② Height Difference Mark ③ Height Difference
- ④ Hole number ⑤ Par number
- ⑥ Current hole layout
- ⑦ Show direction from the current location to the green
(Hide when compass calibration is required)
- ⑧ Show left or right green when there are two-greens
L: Yellow R: Red
- ⑨ Current view and hazard display position
 - 1st: Green view
 - 2nd: Simple view
 - 3rd and after: Location of hazards displayed in hazard view
- ⑩ Current Location ⑪ Current time
- ⑫ Recommended club
- ⑬ Connected to Shot Tracker (Not Connected: Red)
- ⑭ Distance to the front edge
- ⑮ Distance to and location of the selected hazard
- ⑯ Weather Information (Available only when connected to 3DX)
- ⑰ Zoom In / Out

Navigation Screen (View Types)

Hazard View

Hazard View displays the distance to the front edge of the green as well as the distances to various hazards on the course.

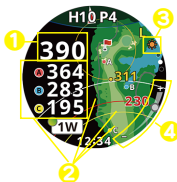

- ❶ Distance to the front edge of the green
- ❷ Distance to and location of the selected hazard
- ❸ Weather Information
- ❹ Zoom In / Out

Simple View

Simple View displays the distances to the center, front edge, and back edge of the green in a large and easy-to-read format.




- ❶ Distance to the green

Green View

Green View displays the contours, shape, width, and depth of the green.

The layout of the green, including the front and back edges, changes according to your current location.

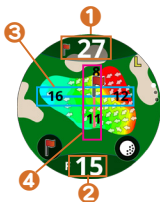

- ❶ Distance to the center of the green from your current location
- ❷ Distance to the front edge of the green from your current location
- ❸ Blue Line: Width of the green from your current location
- ❹ Red Line: Depth of the green from your current location

Slope Direction Function

In Green View, the direction of the slope is displayed with an arrow, which can help improve the accuracy of your approach and putting.





You can toggle the display of the arrow by swiping the screen up or down.



Note: Slope Direction Function does not be displayed in competition mode or for golf courses outside of Japan.

Dynamic Green Eye Function


Green View displays the undulations of the green in color.

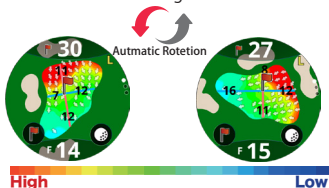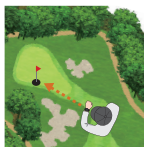

Green View display automatically rotates to match the direction from your current location, showing the width, depth, and distance to the front edge and center of the green.

Note: The green's automatic rotation adjusts to the direction of the green from your current location, not to the direction you are facing. Even if you rotate in place, the green display does not rotate.

Putt Simulation

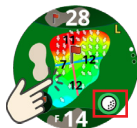

Tap the golf ball icon on the screen, then tap any desired point on the screen. The distance and height difference from the point to the pin is displayed.

Pin Position Registration




Tap the pin icon on the screen to register the pin position.


Note: Dynamic Green Eye is not available in competition mode or for golf courses outside of Japan.

Auto View Change Function

The navigation screen automatically switches between the Hazard, Simple, and Green Views depending on the remaining distance to the green.

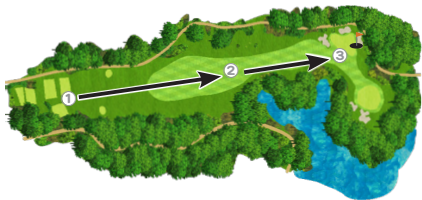

① Hazard View:

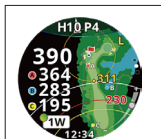

When the remaining distance is longer than the set driver distance (Driver Dist: Page43), Hazard View is displayed.


Note: The default driver distance is set to 230 yards.

② Simple view:



When the remaining distance is shorter than the set driver distance, Simple View is displayed.

③ Green View:

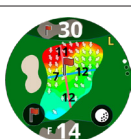

When the remaining distance is shorter than the set layout distance, Green View is displayed.

Note: The default layout distance is set to 100 yards.

Note: To manually change the view, swipe up or down on the screen to switch between the Hazard, Simple, and Green Views in that order.

Auto Measure Function (Automatic Distance Measurement)

The device automatically detects your swing and registers the location. This enables automatic display of the shot distance and other relevant data. Additionally, it is linked to the scorecard, and each detection increases the count on the scorecard.



① You can enter the club used.

Note: The club selection screen is not displayed in Green View.



② Second Shot:

Automatically displays the distance from ① to the second shot location. In addition, the device registers the second shot location.

③ Third Shot:

Automatically displays the distance from ② to the third shot location. In addition, the device registers the third shot location.

Note: If the distance between shots is too close, it is not automatically detected.

Note: Short approach shots and putts is not automatically detected.

Note: In the Green View screen, shot distance cannot be checked. If you wish to check the distance, please manually switch to Simple View or Hazard View.

Manual Location Registration

For short-distance approaches or putts that are not automatically swing detected, you can manually register the location. It is linked to score.

During Navigation




To register the location manually, long press the upper button or tap the club.
To register the next location, long press the upper button or tap the club again.



Note: It cannot be registered if GPS is not acquired.

Two-Green Manual Switching

For courses with two-greens, you can manually switch between the left (L) and right (R) greens by tapping the icons on the navigation screen.

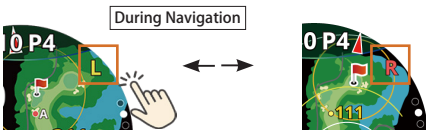

Note: If you selected the green when starting navigation, you cannot change it by tapping. Please use the navigation menu to make changes.

Display Text in a Larger Size

It prominently displays the remaining distance to the green.



Tap "Large Text" from the Navigation menu, or short press the upper button on the navigation screen to switch to large text display.

This mode shows the distances to the center, back edge, and front edge of the green in a larger format.

Fairway Navigation Function

Fairway Navigation function displays the distance from your current location to the center of the targeted fairway, as well as the distance from that point to the green.



During Navigation

Double-tap the layout in the direction you want to aim.

In situations such as dogleg holes or trouble shots where your ball has strayed from the fairway, point the top of the device (the 12 o'clock position on the watch) in the desired direction.

The screen displays the distance to the center of the fairway in that direction and the distance from that point to the center of the green.

(If there is no fairway in the pointed direction or if it is already directed at the green, the distance from your current location to the green is displayed.)



If your ball ends up in the woods as shown in the diagram on the left, fairway mode displays the distance to the fairway in the direction you point the device and the distance from that point to the center of the green.

● Real Distance Display



Displays the total remaining distance from your current location to the fairway and from the fairway to the green.

A message is displayed when compass calibration is required. Calibration is completed by rotating the device several times in a figure-eight motion.



The distance to the fairway is not displayed if it exceeds the driver distance set in the navigation settings (Page43). In such cases, only the distance from your current location to the green is displayed.

Green Direction


When the green is not directly visible, such as on a dogleg course, the direction to the green from your current location is displayed with an arrow.



Note: The green direction is not displayed if compass calibration is required.

During Hazard and Simple View

During Navigation

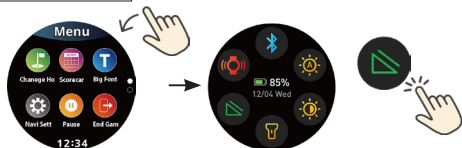

Swipe down on the main menu, then go to the sub-menu to turn on the horizontal/slope-adjusted distance switch.

Note: Enabled by default.



① Horizontal Distance to green
(in white text)



① Slope-Adjusted Distance to green (in yellow text)

② Height Difference Mark to green
Flat Up Down



Flat




Up




Down

③ Height Difference from current location
to green center

Uphill

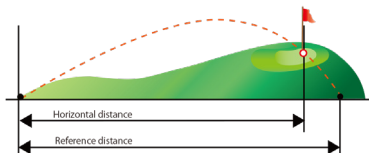

Downhill

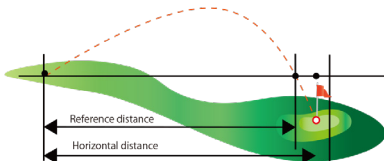

Note: Slope-Adjusted Distance: The actual distance to hit, calculated by considering the horizontal distance, the height difference change to the target, and the trajectory.

Note: The distance displayed with height difference change is either the slope-adjusted distance or the horizontal distance. The straight-line distance is not shown. difference or reference distance displays.


Three-Point Distance Measurement

It simultaneously displays the distance from your current location to the desired point and from that point to the center of the green.

During Navigation



While in Simple or Hazard View, double-tap anywhere on the layout.

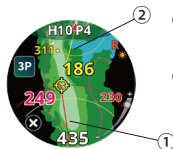

- ① The distance from your current location to the tapped point (red line)
- ② The distance from that point to the green center (yellow line)

Display Options

During a round, this product can display distances and directions with circles or lines.

Note: Settings can be configured from "Navigation Settings (Page43)



① Concentric Circles:

Displays 100-yard (white), 200-yard (yellow), and 300-yard (white) concentric circles from your current location.

② Layup Circle:

Displays an orange circle indicating your layup distance centered on the green (Layup distance registration Page43).
Default: 100 yards

③ Shot Distance

④ Pin Direction (Green Direction):

Displays an arrow indicating the direction to the green from your current location.

⑤ Driver Distance Circle:

Displays a red circle representing your registered driver distance from your current location (Driver distance registrationPage43).
Default: 230 yards


Scorecard

You can enter the score (strokes, putts).

During Navigation



Swipe left on the navigation screen

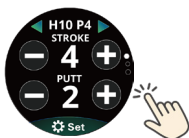


Select the hole you want to enter using the ◀ ▶ .
Enter your score and number of putts using + - .



Swipe up to display the next screen.
The tee shot status selection screen appears.
Select the appropriate mark.



Swipe up further to display OB/Penalty.

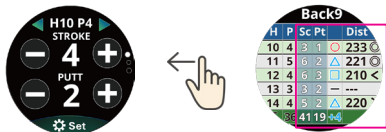

Swipe left to return to the score entry screen and confirm that the input has been applied to the score.

Note: Swipe right on the score entry screen to return to the navigation screen.

Navigation & Play Information

By swiping left or right on the navigation screen, you can view the current golf course name, hole information, play time and step count.



- ① Golf course name
- ② Course name
- ③ Hole number
- ④ PAR of the current hole
- ⑤ Elapsed play time (per half round)
- ⑥ Steps taken during play
- ⑦ Battery Level
- ⑧ Date
- ⑨ Number of satellites in use
- ⑩ Current Time

Navigation Menu

Navi menu is used to change holes or end navigation.

During Navigation



To display the navigation menu, short press the lower button or swipe right on the screen.

Note: To return to the navigation screen, short press the lower button again or swipe right.



● Change Hole:

Manually change the hole for navigation. You can switch between courses (OUT/IN, etc.) by swiping left or right. Tap the hole number to switch to a different hole.

 
Note: After manually changing the hole, automatic hole transition does not occur for a few minutes.

● Scorecard:

You can enter and check your score (P38).

● Large-Text:

Displays the distance to the green in a large font.



Note: When large text is selected, the icon changes to Course Navigation.

● Settings:

Configure navigation settings (P43).

Note: Some items are not displayed while navigating.

● Navi Pause:

Pause navigation and switch to watch mode. When navigation is restarted, it resumes from the paused state.



By setting the time for resuming navigation, a notification appears 10 minutes prior, and navigation automatically resumes when the set time arrives. This feature is useful at the end of a half-round, for example.

Note: Please select "Resume Navigation" from the main menu.

● Exit Navi

End navigation and return to the watch screen.
Navigation Settings.

Navigation Settings

Select "Navi Setting " from the navigation menu or the main menu.



● Guide Option:

Select whether to display or hide the layup circle, concentric circle, shot distance, pin direction and other elements. (Page 37)

● Score Entry Settings:

Select the items you want to record for scoring. (Page 38)

● Navi Distance Unit:

You can select the distance unit (yards or meters) to be displayed during navigation.

● Driving Dist:

Register your driver distance. (Page 37)

● Layup Dist:

Register your layup distance. (Page 37)

● Club Set:

Connect to Shot Tracker. (P45)

GPS Reception



If "----" appears on the navigation screen, GPS signal is not received. Move to an open area to receive the GPS signal.



If "999" appears on the navigation screen, the remaining distance is more than 1000 yards. Please check if the correct course and hole are selected.

- If GPS cannot be acquired for 5 minutes after starting the golf navigation, the navigation automatically pauses.
- If two hours pass without GPS acquisition, the navigation automatically ends.

Note: Check the GPS reception status with the antenna mark at the top of the screen.

Connect to the club set (Shot Tracker)

This product can be connected to the Shot Navi Shot Tracker (sold separately) to enable smooth recording of the clubs used.





Not Connected : ●



Connected : ●

Tap "Club Set" in Navigation Settings.

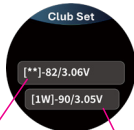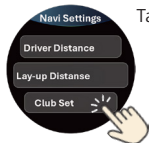

[**]Not Registered

[1W]Registered Clubs




For pairing instructions with this product, refer to the Shot Tracker user manual.

<https://shotnavi.jp/training/shottracker/>




Activity Tracker Setting

This product automatically measures steps and calories burned.

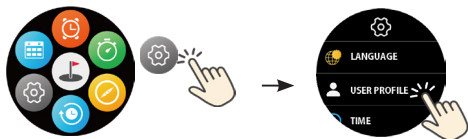


From the main menu, tap “Device Settings” and open “Personal Settings.”

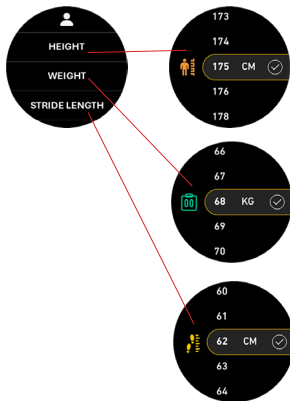

Set your height, weight, and stride length.

Using the Pedometer

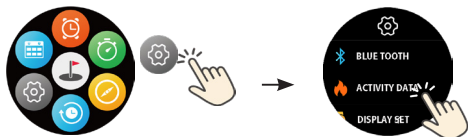


From the main menu, tap "Device Settings" and open "Activity."

Note: Before using the step counter, set the time (Page 16).


If the time is incorrect, graphs and weekly summaries may be incorrectly.

Step Count Graph

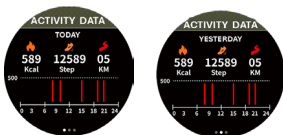

Displays hourly graphs of today's and yesterday's steps and calories burned.

Weekly Summary

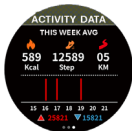

Displays the average steps and distance from 1 to 7 days ago, excluding today.

Note: the step counter resets at 12:00 a.m.

Daily step data is recorded from 12:00 a.m. to 11:59 p.m.

Data Update / Using the SCO Log

Data Update

To update device data, please download the file from our website. For detailed update instructions, please refer to our website.

<https://shotnavi.jp>.

Supported Courses:

In Japan: 100% (golf courses with a course length of 2,000 yards or more)

Oversea: 149 countries, 58,945 courses (as of March 2026)
(Fairway Navigation, Height Difference Display, Green View, and Dynamic Green Eye is not available for some overseas courses.)

Please check here for the latest supported overseas golf courses.

<https://shotnavi.jp/world>

Data updates are also available through the app. (Page53)



SCO Log:

SCO Log is a comprehensive round data management service. You can manage your shot history, score, and compare your data with other users.

You can manage your data via the Shot Navi website.

For further details, please access our website.

<https://shotnavi.jp/solog/>

(Data only for golf courses in Japan))



Utilize the App

Smartphone App “Shot Navi 3DX”

This product can be used in conjunction with the Shot Navi 3DX smartphone app. 3DX offers advanced features such as a 3D course layout view and a target view via the camera. By linking this product with 3DX, you can transfer score and waypoint data in real time to the app during navigation, and access weather forecast information on the device.

Download the App

This product can be used in conjunction with a dedicated application for iOS or Android OS that supports Bluetooth 4.0. Android OS version 8 (64-bit) or higher
iOS version 15.0 or higher (as of March.2026)



<https://shotnavi.jp/snp/3dx/jp/>

Note: Some Android devices may not be compatible, even if they meet the version requirements.



For detailed connection instructions and the latest data regarding the app, please visit our official website.

<https://shotnavi.jp/snp/vellix/bluetooth.php>



Connect This Product with "Shot Navi 3DX"



Short Press the upper button.
From the menu screen, tap  "Settings,"
then tap "Bluetooth."



Short Press the upper button.
From the menu screen, tap "Settings," then
tap  "Bluetooth."

Bluetooth is turned on.



Note: Depending on the smartphone, the
timing and content displayed may vary.



Turn ON Bluetooth and location services.
If app permissions are required, please
allow permissions for 3DX.



Note: Please refer to the user manual of your
smartphone for further instructions.



Launch the 3DX app, and tap "ShotNavi
Device" on the main menu. This takes you
to the device connection screen.
Tap "Connect to Device."



Note: If the connection has already been set up, the name of the last connected device is displayed.



When a dialog requesting permission for location services or other permissions is displayed, please tap "Allow."



When the device is found, its name appears. Tap the device name to start the connection process.



The initial connection requires pairing with the device.



When pairing process starts, PIN code is displayed on the device.
Please enter the PIN code displayed on the device into the smartphone.


Enter the PIN code into your smartphone.



Once pairing is complete, a completion message appears on both this product and 3DX.

● Notification Function

It notifies you of incoming calls and notifications from SNS on your smartphone.

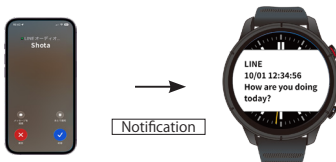


Note: This function is only available on iPhone 5S and later models.

Note: It can be used only when ShotNavi app is installed and connected via Bluetooth.

Register Club Distance

Select "Club Sets" from the main menu of the app.


You can choose up to 14 clubs and register their distances.

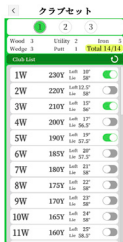

Select "Send club set data to device" from "ShotNavi Device," and the club set information is sent to the device.


Based on the transmitted data, it is displayed in the bottom left corner of the screen.

Recommended club

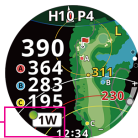

● Pin Position Registration

In 3DX app, search for the golf course where you want to register the pin position from the "Golf Course Search" menu. Start navigation for the selected course.

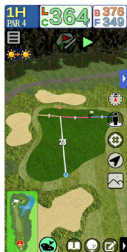

Tap the  button at the middle.

Drag the pin flag to the desired location on the screen.

Once you drag the pin flag, the button at the top of the screen changes to the register button.

Tap the register button to save the current pin flag position as the pin position information.





Exit the navigation and return to the home screen. Then, select "Send Pin Position Data" from "Shot Navi Device" to send the pin position information to the device.

● Weather Information

When you start navigating while connected to 3DX, the weather information for the golf course is displayed in the top of the screen of the product.

The current forecast is displayed in the upper right corner of the navigation screen, and the weather, temperature, wind speed, and wind direction for the next six hours are displayed in the "Weather Information" of the navigation menu.

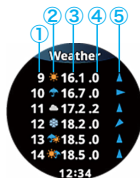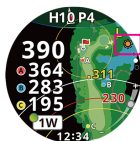

- ① Current Time
- ② Weather
- ③ Temperature
- ④ Wind Speed
- ⑤ Wind Direction
(the top points to the north)

Note: Weather information requires 3DX to be connected to the internet.

Data Update



From the app's home screen, select "Golf Course Search."

Data updates are available only for golf courses that have been navigated. If there is a navigation history for a golf course, please proceed to "ShotNavi Device" and follow the steps.



Search for and select a golf course from the area.

Start navigation once and then return to the home screen and tap "Home Screen" in the menu.




Once you return to the home screen, select "Shot Navi Device."



This takes you to the device connection screen. Tap "Connect to Device."



Top “Update Course Data for Device.”

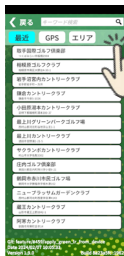

Then, tap the “Update Button” for the selected course.



The update is executed.

Note: Depending on the version of Android or the manufacturer's specifications, connections may not be successful.



Note: The functions and screen displays described in this manual are based on the product's release version. Due to product updates, the functions and display content may differ.

Product Specifications

	V14	V12
Dimensions (strap excluded)	Ø 48 x 12.5mm	Ø 42 x 12.5mm
Weight (strap excluded)	28g	24g
Display	1.43inch AMOLED	1.2inch AMOLED
Continuous Usage Time	Up to 15 hours	Up to 12 hours
Full Charging Time	Approximately 2 hours	
Charging Method	Magnetic Charging and Data Cable (USB)	
Battery	Lithium polymer battery	
Water Resistance	IPX7 (Water-resistant to a level of daily use)	
Data Update Method	Data update via USB storage mode	
Included Accessories	Watch Case; Magnetic Charging and Data Cable (USB); Quick Start Guide/Warranty	

Note: AC adapter is sold separately. If you are providing your own, please use one with the following specifications.
Output: DC 5V, 500~1000mA.

Note: Using an unapproved AC adapter may result in malfunction or cause accidents.

Note: The activity tracker consumes more battery even when the watch screen is in use.

Note: The continuous usage time of the battery varies depending on the frequency and duration of use.

Power-Saving Mode:

Screen will automatically turn off when the device is not used for a certain period of time, when the screen turns sideways, or tilt the device.

To turn the screen back on, you can check the screen while wearing the terminal, tap the screen twice, or touch the button.

■ The device does not turn on:

he battery may be depleted, please charge the device.

If the battery is completely drained, it may take some time before the device powers on.

■ Cannot search for golf courses/Remaining distance is not displayed:

GPS reception may not be available. Please move to an open area and check again.

■ Charging issues:

Please ensure that the device is properly connected to the charger and that the USB cable is securely inserted. If the battery needs to be replaced, please contact the store where the product was purchased. Note that replacing the battery yourself voids the warranty.

■ Distance is incorrect:

- 1.Check the current location and selected hole.
- 2.Check the left or right green selection.
- 3.Confirm that the distance unit (yards/meters) is set correctly.
- 4.The golf course data may not be up to date. Please update to the latest data. It is recommended that you update the data before use. For more details, please visit our website.

<https://shotnavi.jp>



After-Sales Service

If the product malfunctions under normal use as outlined in the instruction manual, it is repaired or replaced free of charge within one year of the purchase date. If repair or replacement is necessary, please bring the product and the warranty card to the store where it was purchased. We provide after-sales service to our customers in accordance with the following. Please agree to these regulations before requesting after-sales service.

Repair and replacement policy

1. Items sent with the defective product may not be returned. Please remove any items that were installed after the customer purchased the product before sending it to us.
2. Products sent to us is repaired or replaced at our discretion. In the interest of environmental protection, we may use recycled parts for repair or replacement.
3. We may update the system software as needed.
4. The specifications of the product and its accessories may be subject to change.
5. Our repair service is available only within the country where you purchased the product.

In the event of a repair refusal

1. In the case of improper repairs, disassembly, or modification (software).
2. Products that are believed to have been damaged during transport due to insufficient packaging.
3. If the damage is severe and the company determines that repair would not be able to maintain functionality.

Repair fees

After the warranty period, after-sales service incurs a charge. For detailed pricing, please contact to the store where it was purchased.

Warranty

If the product malfunctions within the warranty period under proper use in accordance with the instructions in the manual, it is repaired or replaced free of charge.

- A. Repairs for a product are generally carried out in the country where you purchased it.
- B. Support is limited to the country where the product was purchased. information.

Even within the warranty period, the following cases results in a paid repair or replacement.

- A. Malfunctions or damage caused by misuse, unauthorized repairs, or modifications.
- B. Malfunctions or damage caused by transport and drops after purchase.
- C. Malfunctions or damage caused by fire, earthquakes, water damage, lightning, or other natural disasters, abnormal voltage, or the use of an inappropriate power source.
- D. Malfunctions due to strong shocks (dropping, twisting, crushing, etc.).
Note: Repairs or replacements of the band and exterior are not covered under the warranty.
- E. Replacement of consumable parts (including the rechargeable battery) and accessories.
- F. Malfunctions due to leaving the product in abnormally high temperatures (such as on the vehicle's dashboard, in the trunk, or under direct sunlight) or in extremely low temperatures.
- G. Malfunctions due to water damage, such as exposure to rain.
- H. Scratches or other changes in appearance that occur during use.
- I. If the warranty card is not presented, if the required information (such as date of purchase, customer name, and dealer name) is not filled in, or if it has been altered.
- J. Products purchased through auctions or personal transactions are not covered by the warranty.

The warranty is valid only within the country where you purchased the product. Please keep the warranty card in a safe place as it is not reissued.

Important Notes Regarding Global Support

A.Repairs for a product are generally carried out in the country where you purchased it.

B.There may be restrictions on shipping and handling repaired items to other countries. Please contact the store where you purchased the product for more information.

Note: This warranty shall be valid only within the country where you purchased the product. For sale and use in the country only. Commercial use and rental prohibited.