

Shot Navi[®] Nexia

WILDEYE

Laser Rangefinder for Golf

User Manual

Introduction

Thank you for purchasing the Shot Navi Nexia WILD EYE (hereinafter referred to as “the Product”).

This Product is a laser-based distance measuring device designed to help improve your golfing performance and enhance the pace of play.

The name “WILD EYE” represents a sharp and instinctive vision, symbolizing the Product’s ability to instantly lock onto targets and deliver accurate and confident shot-making.

Before using the Product for the first time, please be sure to read this User Manual carefully to ensure proper and safe operation.

After reading, please keep this manual in a safe place for future reference.

Unauthorized reproduction or distribution of this manual, in whole or in part, is strictly prohibited.

If you have any questions, please contact the customer service center listed on the warranty card.

Table of Contents

Before Using This Product

Introduction	P2
Table of Contents	P2~3
Safety Precautions	P4~5
Warnings/Attentions	P5~6
Maintenance	P6
Before Using on the Golf Course	P6
Contents List	P7
Charging	P7
Parts Names	P8
Screen Display Explanation	P9

Use on Golf Courses

Measuring	P10
Power On/Off	P10
Switching between Meters and Yards	P10
Adjusting Focus	P10
Measurement Modes	P11
① Point Measurement	P11
② Pin Seek Measurement	P12
③ Scan Measurement	P13
④ 3D Measurement	P14~16
Turning Height Difference Measurement ON/OFF	P17
Slope-Adjusted Distance	P18

Others

Product Specifications	P19
FAQ	P20
After-Sales Service	P21
Warranty	P22~23
Warranty Card	P24


Safety Precautions

To ensure safe use of this product, please follow the safety guidelines outlined below. After reading, keep this user manual safely at hand for future reference. Unauthorized reproduction of this manual is prohibited.

- **Handle with Care:** Avoid dropping or impacting this product. Severe impacts may cause significant damage.
- **Operating Temperature:** The operating temperature range of this product is 0°C to 50°C . Avoid using this product in environments with sudden temperature changes, even within the range, as this is a precision instrument.
- **Avoid leaving unattended for a long time:** Do not leave this product in direct sunlight or in extremely hot or cold environments for long periods. This may cause malfunction or deterioration of synthetic materials.
- **Electromagnetic Interference:** Avoid placing this product near equipment that generates strong electromagnetic fields or radiation during use or storage.
- **Long-Term Storage:** When not using this product for an extended period, store it in a cool and dry place. For long-term storage, place this product in a dry box to prevent damage.
- **Do not store this product in following environments:**
 1. In areas with poor ventilation and high humidity
 2. Inside a vehicle exposed to excessive sunlight or extreme temperatures
 3. In environments where humidity exceeds 90%
- **No Disassembly or Modification:** Never disassemble, modify, or attempt to repair this product yourself. Doing so may cause damage to this product and result in exposure to laser beams, which can cause visual impairment. Warranty will be voided.
- **Avoid Extreme Conditions:** Do not use this product in extremely cold, hot, or humid conditions, as this may cause malfunction.
- **Dusty Environments:** Do not use this product in dusty areas, as this can lead to malfunction.
- **Keep Away from Fire:** Do not place this product near fire, as it may cause deformation or malfunction.
- **Water Resistance:** While this product is designed to be water-resistant (equivalent to IPX4), do not intentionally expose it to water or submerge it. If there is moisture around the buttons, wipe it off before operation.

- **Make sure the charging cover is securely closed before use.**

Note: Do not store or leave with the lens exposed to direct sunlight.



The focusing effect of lens may damage the display.



Warnings

Please do not do following things as it may cause visual impairment:

- Do not look into the laser emission port. Exposure to laser light may cause visual impairment.
- Do not aim the laser at another person's eye.
- Do not operate the measurement button when this product is not in use.
- Never disassemble this product.
- Keep this product out of reach of children.
- Avoid dropping or impacting this product. If this product starts to make unusual noises, stop using and contact the store where you purchased the product.
- Do not use this product to look directly at the sun or any other strong light source.



Attentions

Please do not do following things:

- Do not use this product underwater.
- Do not store this product inside a car (inside a caddy bag in a trunk) which is under the blazing sun or exposed to direct sunlight.
- Do not use or store near heating appliances.
- Avoid sudden temperature change, as this may cause condensation on the lens.

Note: This product is designed to be waterproof equivalent to IPX4, and handle sweat and short periods of rain during use. However, do not expose it to prolonged rain or immerse it in water. When a drop of water gets on the main unit, wipe off moisture promptly and allow it to dry in the shade.

Note: Storing this product with a depleted battery may result becoming unusable. The battery protection circuit is designed to prevent overcharging or 0 volts, but due to natural discharge, the battery may eventually drop to 0 volts. To prevent this situation, for long-term storage, store this product with the battery charged to approximately 50%.

Do not store this product at full charge, as this can contribute to battery degradation or failure. Do not keep this product connected to a charger for long durations, as overcharging may cause chemical changes, swelling, overheating, or fire.

Maintenance

Remove dust from the main unit using a blower or air duster, or gently wipe it with a soft clean cloth.

As with the main unit, dust on the lens should be lightly wiped with a blower, air duster, or soft clean cloth. For fingerprints and other smudges, wipe with a commercially available lens cleaner, etc. Wiping the lens while dust or dirt is still on the surface may damage the lens.


Before Using on the Golf Course

This product calculates distance by measuring the time it takes for a laser beam to travel to the target and return. The accuracy of the measurement may be affected by environmental factors, such as the color, shape, and material of the target area, as well as weather conditions.

⚠ Do not use this product to look directly at the sun or any other bright light sources. When the sun is low in the sky in the early morning or at dusk, there is a risk of accidentally looking at it, which can cause damage the device and affect measurement accuracy.

Contents List

Main Unit



User Manual /
Warranty Card



USB Type-C Cable for
Charging



Carrying Case




Carabiner



Lens Cloth



Charging

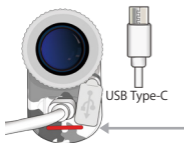


To charge the device:

Open the power cover on the device and plug the USB Type-C terminal (the smaller one) into the USB port.

Connect the USB-A terminal on the other end of the cable to a computer or AC adapter to begin charging.

The LED on the top of the device lights up red.

When charging is complete, the LED lights up green.

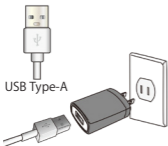


Note: AC adapter is sold separately. Please use the following specifications if you prepare your own.

Output: DC 5V, 500~1000mA

Note: Use of a non-standard AC adapter may lead to malfunction or accident.

Parts Names

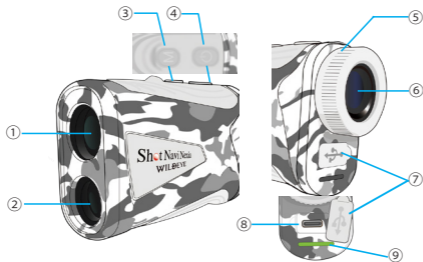

- ① 6x Telephoto Lens/Laser Receiver ② Laser emitting unit

③ Mode Button

- Short Press: 3D measurement ON/OFF
- Long press (about 3 seconds): height difference measurement ON/OFF.

Note: Height Difference measurement is ON by default when shipped.

④ /Measurement Button

- Short press: power ON. (when powered ON, performs point measurement)
- Press twice consecutively: Scan measurement
- Press and hold: Pin-seeking measurement (pin search)

To switch the distance unit, press and hold both the ③ Mode button and ④ Power button simultaneously for about 3 seconds.

Note: The default setting is Yd (yards).

- ⑤ Focus Adjustment Ring ⑥ Viewfinder ⑦ Power Cover ⑧ USB Port

⑨ Charging indicator


LED

Unlit: height difference measurement is ON

- Lit (green): height difference measurement is OFF/charging complete
- Lit (red): the device is charging

⚠ Do not look directly into this part since the laser light can cause visual impairment.

Screen Display Explanation

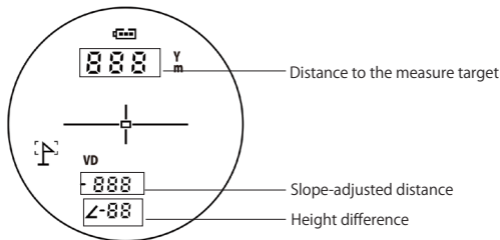

Target Mark

Center this mark on the target for measurement.
It flashes during measurement.


Y
m

Distance Unit

m: Meter
Y: Yard



Battery Level

Displays the current battery level.
When , please recharge the device.



Pin Seek Measurement

Displays when pin seek measurement is active.


VD

Height Difference Mark

Displays when height difference is ON.

Measuring


Power ON/OFF

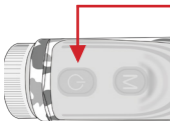

Look through the viewfinder and short press the power/measurement button to turn the power on. When the power is turned on, the display becomes visible in the viewfinder. If no operations are performed for about 15 seconds, the power automatically turns off.

Note: If the display does not appear, please check the battery level.

Switching Between Meters and Yards

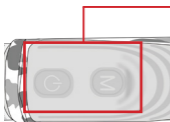

With the power on, press and hold the power/mode button simultaneously for about 3 seconds.

Note: The default setting is yards (Y).

Adjusting Focus



If the image is unclear, rotate the focus adjustment ring to adjust.

Measurement Modes


① Point Measurement

This mode allows you to measure the distance to a target aligned with the center of the viewfinder.



1. Short-press the Power/Measure button to turn on the device.

Align the center of the target mark with the desired object, then short-press the Power/Measure button again to start the measurement.

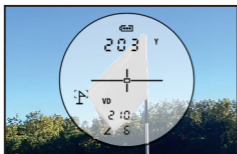


2. The measurement result is displayed.

Note: If the pin flag cannot be measured accurately, please try the Pin Seek measurement mode described on page 12.

② Pin Seek Measurement (Pin Search Assistance)

This function helps you locate the pin flag when it is difficult to align the sight with it. When searching for a target in front of the initially measured object, the device notifies you of measurement completion with a vibration.

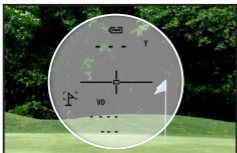

1. Short-press the Power/Measure button to turn on the device.
Aim at an object located behind the pin flag, then press and hold the Power/Measure button to start the measurement.



2. will flash during measurement.
Once a provisional distance is displayed, slowly move the crosshairs so that the pin flag is centered.



3. When the aim aligns with the pin flag, the device will vibrate and the measurement will be completed. The displayed distance is the distance to the pin flag.

Note: If a target other than the pin flag is measured, please repeat the measurement.

Note: If the battery level is low, the Pin-Seeking function may not operate properly.

Note: This function works when the distance between the foreground (pin flag) and the background target is at least 5 meters.

Note: If the distance to the pin flag exceeds 250 yd, the Pin-Seeking function may not work properly.

③ Scan Measurement


This function is useful when you want to measure the distance to multiple targets such as bunkers, creeks, or trees simultaneously.



1. Short press the power/measurement button to turn on the device. Aim at the target and quickly short press the power/measurement button twice to begin measuring.
2. The device continuously measures the distance to targets for about 10 seconds.
3. After 10 seconds or upon short pressing the power/measurement button again, measurement is completed with vibration.

④ 3D Measurement

Even without going to the ball's position, you can measure the distance from the ball to the pin from a remote location, such as the cart. This feature allows you to choose your club more smoothly and helps speed up play.

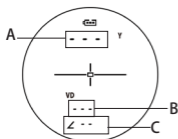

1. Short press the Power/Measurement button briefly to turn on the device.

Press the Mode button briefly to switch to 3D Measurement Mode.

When the switch is complete, **B** will blink.

A: Distance from the ball to the pin flag (3D measured distance)

B: Distance from your current position to the pin flag


C: Actual elevation difference between your current position and the ball/pin flag



2. When **B** starts blinking, measure the distance to the pin flag using Pin-Seeking mode.

Press and hold the Power/Measurement button (Pin-Seeking mode, see page 12) to start measuring.

When the measurement is complete, the distance will be displayed at **B**.

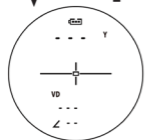

The display will alternate between the blinking screen and the measurement result.



3. Next, measure the distance to the ball using Point Measurement. Align the target mark with the ball and press the button briefly (Point Measurement, see page 11).

When the measurement is complete, **B** will alternately display the distance from your current position to the ball and to the pin flag.


At the same time, the device will vibrate and **A** will display the 3D distance (distance from the ball to the pin flag).

The screen will alternate between the distance to the ball and the distance to the pin flag.

4. Step 3 can be repeated as many times as needed.

When you measure again, the distance displayed in **B** will update, followed by a vibration, and **A** will display the updated 3D distance.

If you want to change the distance to the pin flag, please repeat the process from step 1.

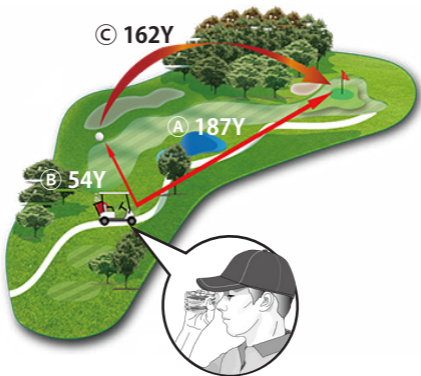

Note: If a target other than the pin flag is measured, please repeat the measurement.

Note: During Pin-Seeking in 3D Measurement Mode, the device will not vibrate.

Note: To exit 3D Measurement Mode, press the Mode button briefly again.

[When measuring the distance to the pin flag]


Note: If the distance to the pin flag exceeds 250 yd, Pin-Seeking may not function properly.

Note: If the battery level is low, Pin-Seeking may not operate properly.


Note: This function works when the distance between the foreground (pin flag) and the background target is at least 5 meters.

Turning Height Difference Measurement ON/OFF

Height Difference Measurement OFF

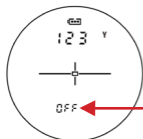


When participating in competitions etc. where height difference measurement is not allowed, you can turn this feature off. While the device is powered on, press and hold the mode button for approximately 3 seconds. Height difference and slope-adjusted distance display is hidden.



The LED indicator turns on when height difference measurement is OFF, signaling that height difference is not being measured.

Height Difference Measurement ON

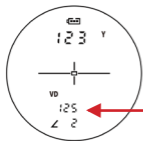

To return height difference measurement to on, press and hold the mode button for about 3 seconds while the device is powered on. The height difference, slope-adjusted distance and height difference marks is displayed.




Note: The device is set to height-difference measurement ON by default when shipped.

The LED is unlit when the height difference measurement is turned on.

Slope-Adjusted Distance


Uphill Example

If you hit based on the straight-line distance ($AC = 148$ yards), the ball may not reach the pin due to the uphill slope. To reach the pin, you need to hit based on the horizontal distance ($AB = 159$ yards). This product automatically displays both AC (line distance) and AB (slope-adjusted distance).

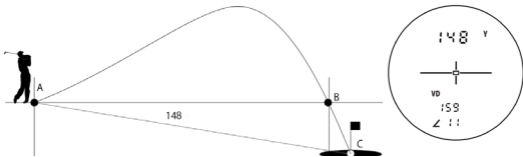

Downhill Example

If you hit based on the straight-line distance ($AC = 148$ yards), your ball overshoots the pin due to the downhill slope. To reach the pin, you need to hit based on the horizontal distance ($AB = 141$ yards). This product automatically displays both AC (straight-line distance) and AB (slope-adjusted distance).

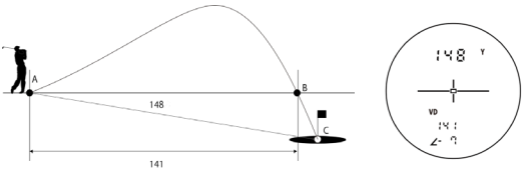

Note: When height difference measurement is OFF, height difference and slope-adjusted distance do not be displayed.

Product Specifications

External Dimensions: 93.2 x 56.5 x 32.6mm

Main Unit Weight: 116g

Battery: Lithium polymer battery (standard USB Type-C)

Charging Time: Approximately 3.5 hours

Note: Number of uses on a full charge: approximately 30,000 point measurements. ※

Measurement Range: 5~874 yards 4.5~800 meters)

Measurement Accuracy: ± 1 meter

Magnification: 6x

Laser Wavelength: 905 nm

Laser Classification: IEC 60825-1 Class 1M Laser Product

Lens Diameter/ Effective Diameter: 21 mm/19.8 mm

Exit Pupil Diameter: 3.3 mm

Eye Relief: 14.7 mm

Operating Temperature: 0°C ~50°C

Storage Temperature: -20°C ~60°C

Water Resistance: Equivalent to IPX4 (splash-proof level)

Note: The number of uses decreases with years of use and frequency of use (aging).

It varies depending on the measurement mode (Scan, Pin Seek, 3D Measurement).

When performing consecutive three-point measurements, errors may occur depending on usage conditions such as the number of measurements or differences in the direction of the measurement target.

FAQ (Frequently Asked Questions)

Q. The device won't turn on.

- A. • Ensure the battery is sufficiently charged.
• Confirm you press the power/measurement button correctly.

Q. The distance measurement seems incorrect.

- A. • Make sure the lens is clean.
• Make sure that the target is properly aligned with the crosshairs.
• Check if the measurement results are not correct after changing the target.

Note: Laser distance measurements are calculated based on the time it takes for the laser to reflect off a target. The following conditions may affect accuracy.

- In case of rain or fog.
- When it is difficult to aim the laser at a target object (e.g., target object is small or thin).
- When the laser does not bounce back well from the target object (e.g., target object is black, complex shape or curved surface, water surface, glass surface, mirror surface, etc.).
- When sunlight enters the lens directly, such as when the sun is low in the sky and backlit.

 **Avoid looking directly at the sun or its surroundings for eye protection.**

After-Sales Service

If the product malfunctions under normal use as outlined in the instruction manual, it is repaired or replaced free of charge within one year of the purchase date. If repair or replacement is necessary, please bring the product and the warranty card to the store where it was purchased. We provide after-sales service to our customers in accordance with the following. Please agree to these regulations before requesting after-sales service.

1. Repair and replacement policy

1. Items sent with the defective product may not be returned. Please remove any items that were installed after the customer purchased the product before sending it to us.
2. Products sent to us are repaired or replaced at our discretion. In the interest of environmental protection, we may use recycled parts for repair or replacement.
3. The specifications of the product and its accessories may be subject to change.
4. Our repair service is available only within the country where you purchased the product.

2. In the event of a repair refusal

1. In the case of improper repairs, disassembly, or modification.
2. Products that are believed to have been damaged during transport due to insufficient packaging.
3. If the damage is severe and the company determines that repair would not be able to maintain functionality.
4. If water ingress or signs of water damage are found on the product, such as from submersion.

3. Repair fees

After the warranty period, after-sales service incurs a charge. For detailed pricing, please contact to the store where it was purchased.

Warranty

1 If the product malfunctions within the warranty period under proper use in accordance with the instructions in the manual, it is repaired or replaced free of charge.

A. To request an inspection, please bring and present the equipment and this manual to the store where you purchased it.

B. Support is limited to the country where the product was purchased.

2 Even within the warranty period, the following cases result in a paid repair or replacement.

A. Malfunctions or damage caused by misuse, unauthorized repairs, or modifications.

B. Malfunctions or damage caused by transport and drops after purchase.

C. Malfunctions or damage caused by fire, earthquakes, water damage, lightning, or other natural disasters, abnormal voltage, or the use of an inappropriate power source.

D. Malfunctions due to strong shocks (dropping, twisting, crushing, etc.).

E. Replacement of consumable parts and accessories.

F. Malfunctions due to leaving the product in abnormally high temperatures (such as on the vehicle's dashboard, in the trunk, or under direct sunlight) or in extremely low temperatures.

G. Malfunctions due to water damage, such as exposure to rain.

H. Scratches or other changes in appearance that occur during use.

I. If the warranty card is not presented, if the required information (such as date of purchase, customer name, and dealer name) is not filled in, or if it has been altered.

J. Products purchased through auctions or personal transactions are not covered by the warranty.

3 The warranty is valid only within the country where you purchased the product. Please keep the warranty card in a safe place as it is not reissued.

Note: If the product is damaged due to dropping, being stepped on, run over by a cart, struck by an object, or subjected to pressure from being carried in a pocket, repair costs is charged.

Note: We may use the personal information (warranty certificate copy) provided by you for purposes such as free repairs during the warranty period and subsequent safety inspection activities.

4 Important Notes Regarding Global Support.

A. Repairs for a product are generally carried out in the country where you purchased it.

B. There may be restrictions on shipping and handling repaired items to other countries. Please contact the store where you purchased the product for more information.

Note: This warranty shall be valid only within the country where you purchased the product. For sale and use in the country only. Commercial use and rental prohibited.